



# \* Hurricane

## User Manual






Version 1.3  
Revised 05/17/17

# TABLE OF CONTENTS

<b>Dimensions</b>	<b>1</b>
<b>Safety Information</b>	<b>2</b>
<b>Fixture overview</b>	<b>4</b>
<b>Introduction</b>	<b>5</b>
<b>AC power</b>	<b>5</b>
Power voltage	5
Power cables	5
Relaying power to other devices	6
<b>Data link</b>	<b>6</b>
Connecting the data link	6
Tips for reliable data transmission	6
<b>Physical installation</b>	<b>7</b>
Fastening the fixture to a flat surface	7
<b>Setup</b>	<b>8</b>
Control panel and menu navigation	8
DMX address setting	8
Control Mode	8
Static Color options	9
Auto Show options	10
Master / Slave	10
<b>Personality</b>	<b>11</b>
Dimmer Speed	11
Key-Lock	11
Calibration	11
Refresh rate	11
LCD brightness	11
<b>Information</b>	<b>11</b>
Software type	11
Usage time	11
Temperature	11
UID	11
<b>Factory reset</b>	<b>11</b>
<b>DMX protocol</b>	<b>12</b>
<b>Onboard control menus</b>	<b>15</b>
<b>Specifications</b>	<b>16</b>
<b>Limited Warranty</b>	<b>17</b>

# DIMENSIONS

ALL DIMENSIONS ARE IN MILLIMETERS

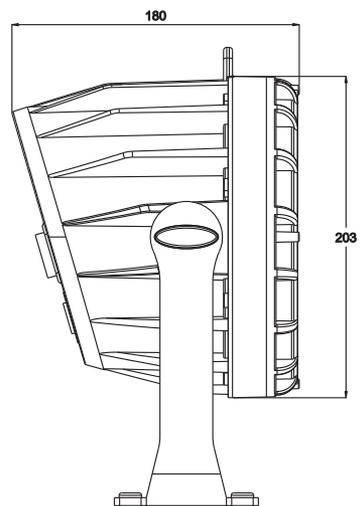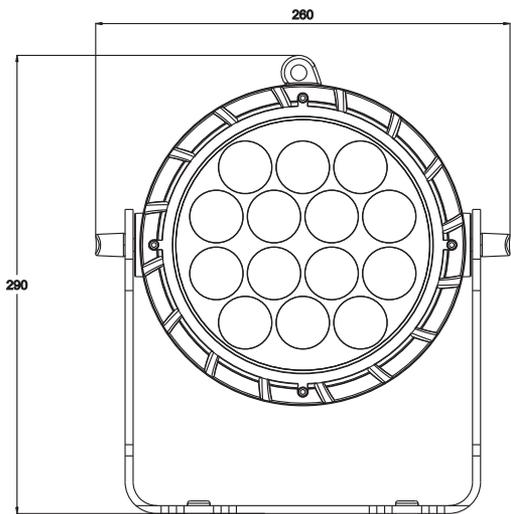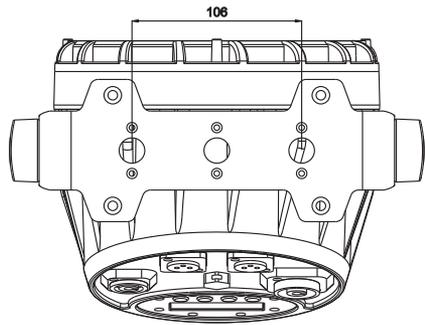

# SAFETY INFORMATION



**WARNING!**  
Read the safety precautions in this section before installing, powering, operating or servicing this product

The following symbols are used to identify important safety information on the product and in this manual:



**DANGER!**  
Safety hazard. Risk of severe injury or death.



**DANGER!**  
Hazardous voltage. Risk of lethal or severe electric shock.



**WARNING!**  
Fire hazard.



**WARNING!**  
LED light emission. Risk of eye injury.



**WARNING!**  
Burn hazard. Hot surface. Do not touch.



**WARNING!**  
Wear protective eyewear.



**WARNING!**  
Refer to user manual.



**Warning! Risk Group 3 (high risk) LED product according to EN 62471. Do not look into the beam at a distance of less than 3 meters from the front surface of the product. Do not view the light output with optical instruments or any device that may concentrate the beam.**

This product is for professional use only. It is not for household use.



This product presents risks of severe injury or death due to fire and burn hazards, electric shock and falls.

Read this manual before installing, powering or servicing the fixture, follow the safety precautions listed below and observe all warnings in this manual and printed on the fixture. If you have questions about how to operate the fixture safely, please contact your supplier.



## PROTECTION FROM ELECTRIC SHOCK

- Disconnect the fixture from AC power before removing or installing any cover or part and when not in use.
- Always ground (earth) the fixture electrically.
- Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault (earth-fault) protection.
- Before using the fixture, check that all power distribution equipment and cables are in perfect condition and rated for the current requirements of all connected devices.
- Power input and through out cables must be rated 20 A minimum, have three conductors 1.5 mm<sup>2</sup> (16 AWG) minimum conductor size and an outer cable diameter of 5 - 15 mm . Cables must be hard usage type (SJT or equivalent) and heat-resistant to 90° C minimum.
- Use only PowerCON TRUE<sup>®</sup> cable connectors to connect to power input sockets. Use only PowerCON TRUE<sup>®</sup> cable connectors to connect to power through put sockets.
- Isolate the fixture from power immediately if the power plug or any seal, cover, cable, or other component is damaged, defective, deformed, wet or showing signs of overheating. Do not reapply power until repairs have been completed.



## DO NOT EXPOSE THE FIXTURE TO RAIN OR MOISTURE

- Refer any service operation not described in this manual to a qualified technician.
- Socket outlets used to supply fixture fixtures with power or external power switches must be located near the fixtures and easily accessible so that the fixtures can easily be disconnected from power.

## PROTECTION FROM BURNS AND FIRE



- Do not operate the fixture if the ambient temperature ( $T_a$ ) exceeds  $40^{\circ}\text{C}$ .
- The exterior of the fixture becomes hot during use. Avoid contact by persons and materials. Allow the fixture to cool for at least 10 minutes before handling.
- Keep all combustible materials (e.g. fabric, wood, paper) at least 100 mm away from the head.
- Keep flammable materials well away from the fixture.



- Ensure that there is free and unobstructed airflow around the fixture.
- Do not illuminate surfaces within 200 mm of the fixture.
- Do not attempt to bypass thermostatic switches or fuses.
- If you relay power from one fixture to another using power throughput sockets, do not connect more than ten fixture fixtures in total to each other in an interconnected chain.
- Connect only other fixture fixtures to fixture power throughput sockets. Do not connect any other type of device to these sockets.
- Do not connect any other type of device to these sockets.
- Do not stick filters, masks or other materials onto any optical component.
- Do not modify the fixture in any way not described in this manual
- Do not use fixture on a dimmer

## PROTECTION FROM INJURY



- Do not look continuously at LEDs from a distance of less than 3 meters from the front surface of the fixture without protective eyewear such as shade 4-5 welding goggles. At less than this distance, the LED emission can cause eye injury or irritation. At distances of 3 meters and above, light output is harmless to the naked eye provided that the eye's natural aversion response is not overcome.






- Do not look at LEDs with magnifiers, telescopes, binoculars or similar optical instruments that may concentrate the light output.
- Ensure that persons are not looking at the LEDs from within 3 meters when the product lights up suddenly. This can happen when power is applied, when the product receives a DMX signal, or when SERVICE menu items are selected.



- Fasten the fixture securely to a fixed surface or structure when in use. The fixture is not portable when installed.
- Ensure that any supporting structure and/or hardware used can hold at least 10 times the weight of all the devices they support.
- Allow enough clearance around the head to ensure that it cannot collide with an object or another fixture when it moves.
- Check that all external covers and rigging hardware are securely fastened.
- Block access below the work area and work from a stable platform whenever installing, servicing or moving the fixture.
- Do not operate the fixture with missing or damaged covers, shields or any optical component.

# FIXTURE OVERVIEW

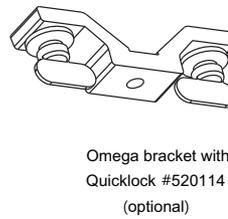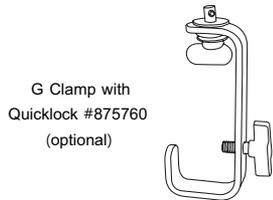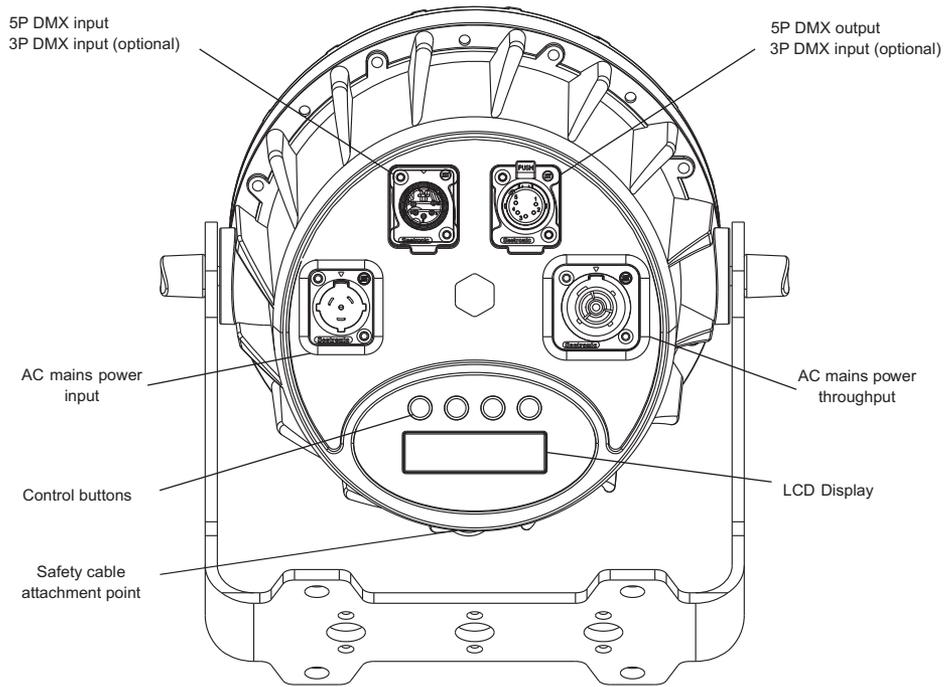

# INTRODUCTION

## OUTDOOR RGBW LED FIXTURE

- UNIQUE BRACKET DESIGN
- TOURING PROOF
- SMOOTH RGBW COLOR MIXING
- IP65 RATING
- SILENT OPERATION
- SMOOTH PROJECTION
- POWERCON TRUE<sup>®</sup> IN & OUT
- RDM READY

## USING FOR THE FIRST TIME



**Warning!** Read “Safety Information” on page 2 before installing, powering, operating or servicing the fixture. Before applying power to the fixture:

- Check that the local AC mains power source is within the fixture’s power voltage and frequency ranges.
- See “Power cables and power plug” on page 7. Install a PowerCON TRUE<sup>®</sup> power input connector on a suitable power cable.

# AC POWER



**Warning!** Read “Safety Information” starting on page 2 before connecting the fixtures to AC mains power.

**Warning!** For protection from electric shock, the fixture must be grounded (earthed). The power distribution circuit must be equipped with a fuse or circuit breaker and ground-fault (earth-fault) protection.



**Warning!** Socket outlets or external power switches used to supply the fixture with power must be located near the fixture and easily accessible so that the fixtures can easily be disconnected from power.

**Important!** Do not insert or remove live PowerCON TRUE<sup>®</sup> connectors to apply or cut power, as this may cause arcing at the terminals that will damage the connectors.

**Important!** Do not use an external dimming system to supply power to the fixture, as this may cause damage to the fixture that is not covered by the product warranty.

The fixture can be hard-wired to a electrical installation if you want to install it permanently, or a power plug that is suitable for the local power outlets can be installed on the power cable.

## POWER VOLTAGE



**Warning!** Check that the voltage range specified on the fixtures serial number label matches the local AC mains power voltage before applying power to the fixture.

The fixtures accepts AC mains power at 100-240 V nominal, 50/60 Hz. Do not apply AC mains power to the fixture at any other voltage than specified.

## POWERCABLES

Power input and throughput cables must have a 20 A minimum rating, have three conductors with a minimum conductor size of 1.5 mm<sup>2</sup> (16 AWG) and an outer cable diameter of 5 - 15 mm. Cables must have a hard usage type jacket (SJT or equivalent) and be heat-resistant to a 90°C minimum. In the EU, the cable must be HAR approved or equivalent.

If you install a power plug on the power cable, install a grounding-type (earthed) plug that has 20 A minimum rating. Follow the plug manufacturer's instructions. Table 1 shows the standard wire color-coding schemes and some possible pin identification schemes; if the pins are not clearly identified, or if you have any doubts

Wire Color (EU models)	Wire Color (US models)	Conductor	Symbol	Screw (US)
Brown	Black	Live	L	Yellow or Brass
Blue	White	Neutral	N	Silver
Yellow/Green	Green	Ground (earth)	⊕ or ≍	Green

Wire color-coding and power connections

## RELAYING POWER TO OTHER DEVICES



Warning! Do not connect more than ten fixtures in total to an AC mains power, in one interconnected chain. Power can be relayed to another device via the light-grey PowerCON TRUE<sup>®</sup> throughput socket.

If you daisy chain the fixtures so that they all draw from the AC mains power via the first fixture, certain points must be respected:

- A heavy duty, three-conductor, 16 AWG or 1.5 mm<sup>2</sup> cable with SJT or equivalent cable jacket must be used to connect the first fixture to AC mains power.
- PowerCON TRUE<sup>®</sup> connectors must be used to draw the AC mains power from the fixtures power throughput sockets and yellow PowerCON TRUE<sup>®</sup> connectors must be used to supply power at the fixture's power input sockets.
- No matter what the AC mains power voltage is, do not connect more than ten fixture fixtures in total (i.e. including the first fixture) to the AC mains power in one interconnected daisy chain using power input and through out connectors.

## DATA LINK

A DMX 512 data link is required in order to control a fixture via DMX. The fixture has 5-pin XLR connectors for DMX data input and output. The pin-out on all connectors is pin 1 = shield, pin 2 = cold (-), and pin 3 = hot (+) Pins 4 and 5 in the 5-pin XLR connectors are not used.

## TIPS FOR RELIABLE DATA TRANSMISSION

To connect the fixture to data:

1. Connect the DMX data output from the controller to the closest fixture's male 5-pin XLR DMX input connector.
2. Connect the DMX output of the fixture closest to the controller to the DMX input of the next fixture and continue connecting fixtures, output to input.

# PHYSICAL INSTALLATION



Warning! The fixture must either be fastened to a flat surface such as a stage or wall, or clamped to a truss or similar structure in any orientation using a rigging clamp.

Warning! The fixture can cause injury or damage if it falls, attach an approved safety cable to one of the safety cable attachment points on the base (see "Fixture overview" on page 6).

Ensure that all illuminated surfaces are at a minimum distance of 200 mm. from the fixture. All combustible materials (wood, fabric, paper, etc.) must be at a minimum distance of 100 mm. from the head. Additionally, make sure there is free airflow around the fixture and that there are no flammable materials nearby.

## FASTENING THE FIXTURE TO A FLAT SURFACE

The fixture can be fastened to a fixed flat surface that is oriented at any angle. Check that the surface can support at least 10 times the weight of all fixtures and equipment to be installed on it.



Warning! The supporting surface must be hard and flat or air vents in the base may be blocked, which will cause overheating. Fasten the fixture securely. Do not stand it on a surface or leave it where it can move or fall over. Attach a securely anchored safety cable to the safety cable attachment point (see "Fixture overview" on page 4) if the fixture is to be installed in any location where it may fall and cause injury or damage if the primary attachment fails.

1. Block access under the work area. Working from a stable platform, hang the fixture on the truss with the arrow on the base facing towards the illuminated area. Tighten the rigging clamp.
2. In case of clamp failure, avoid injury or damage with a secondary attachment such as an approved safety cable that is rated for the weight of the fixture. Connect the safety cable using one of the attachment points at the edges of the base (see "Fixture overview" on page 4). Do not use any other part of the fixture as a safety cable attachment point.

# SETUP

Warning! Read "Safety Information" on page 2 before installing, powering, operating the fixture.

## CONTROL PANEL AND MENU NAVIGATION

The onboard control panel and backlit graphic display are used to set the fixture's DMX address, configure individual fixture settings (personality), read out data and execute service utilities. See "Onboard control menus" on page 14 for a complete list of menus and commands.

Using the control buttons

- To enter the menu select [MODE].
- Press [UP] and [DOWN] to scroll within a menu or adjust values.
- To enter a menu, select a function or apply a selection, press [ENTER].
- To escape a function or move back one level in the menu structure, press [MODE].
- Holding down the "UP" and "DOWN" button for more than 3 seconds, the MENU display rotated 180°.

## DMX ADDRESS SETTING

The DMX address, also known as the start channel, is the first channel used to receive instructions from the controller. For independent control, each fixture must be assigned its own control channels.

The DMX address is configured using the DMX ADDRESS menu in the control panel. When setting the DMX address, press [ENTER] before you can change the address.

- In order to check if there is a DMX signal present on the fixture you can easily see that via the big „DOT“ on the main screen and also when the backlight function is switched to off.
- The fixture is fully RDM ready. So when you are using a RDM ready console you can address the unit and read out its complete status. For RDM functions please refer to the ANSI/ESTA E1.20-2006 standard

## CONTROL MODE

DMX control mode is selected in the CONTROL MODE menu. The fixture has 6 DMX control modes:

	4ch	6ch	7ch	11ch
Dimmer		✓	✓	✓
RGBW	✓	✓	✓	✓
Strobe		✓	✓	✓
CCT			✓	✓
Macro color				✓
Effect				✓
Dimmer /Effect speed				✓
Function set				✓

	HSV	HSI
Hue	✓	✓
Saturation	✓	✓
Value	✓	
Intensity		✓

## STATIC COLOR OPTIONS

There are three options for static color:

## FIXED COLOR

Several options from combined RGBW values. Use Up and Down to scroll through the options.

R = Red	RB = Red & Blue	BW = Red & White
G = Green	GB = Green & Blue	RGW = Red, Green & White
B = Blue	RGB = Red, Green & Blue	RBW = Red, Blue & White
W = White	RW = Red & White	GBW = Green, Blue & White
RG = Red & Green	GW = Green & White	RGBW = Red, Green, Blue & White

## WHITE PRESETS

Easy color choice between 2000K (warm white) to 8000K (cold white)

2000K = 255 Red	135 Green	0 Blue	35 White
3000K = 255 Red	165 Green	0 Blue	135 White
4000K = 255 Red	180 Green	28 Blue	220 White
5000K = 255 Red	200 Green	80 Blue	255 White
6000K = 255 Red	220 Green	120 Blue	255 White
7000K = 255 Red	230 Green	145 Blue	255 White
8000K = 255 Red	235 Green	165 Blue	255 White

## MANUAL COLOR

Mix your own color with each RGBW value separately.

Red	<000-255>	Dimmer Red
Green	<000-255>	Dimmer Green
Blue	<000-255>	Dimmer Blue
White	<000-255>	Dimmer White

## AUTO SHOW

The auto function gives 10 auto programs and 10 custom programs RGBW color combinations which are working without any DMX console. Hit [ENTER] to adjust the speed of the Auto program from 1-20.

1) Auto 1	Auto program 1	11) Program 1	pre-program 1
2) Auto 2	Auto program 2	12) Program 2	pre-program 2
3) Auto 3	Auto program 3	13) Program 3	pre-program 3
4) Auto 4	Auto program 4	14) Program 4	pre-program 4
5) Auto 5	Auto program 5	15) Program 5	pre-program 5
6) Auto 6	Auto program 6	16) Program 6	pre-program 6
7) Auto 7	Auto program 7	17) Program 7	pre-program 7
8) Auto 8	Auto program 8	18) Program 8	pre-program 8
9) Auto 9	Auto program 9	19) Program 9	pre-program 9
10) Auto 10	(AUTO program 1-10 cycle)	20) Program 10	pre-program 10

## MASTER/SLAVE

You can choose between master or slave functioning. The selected mode is visible in the homescreen. If no DMX signal is available the fixture will automatically go to slave mode.

# PERSONALITY

Here you can set all functions for the fixture.

Dimmer Speed	Normal (normal dimming speed )
	Smooth (slowest dimming speed)
KEY-Lock	Locks all the button functions. Standard unlocking password is (MODE+UP+MODE+DOWN+MODE+UP+MODE+DOWN+ENTER)
Calibration	MANUAL calibration mode ON/OFF
Refresh rate	Controls the Flicker frequency of the fixture
	600
	1200
	2400
	4800
LCD brightness	Set the LCD display brightness (1-10)

## INFORMATION

Software type	Shows software version (Vx.x)
Usage time	Use of time and use time reset (password)
Temperature	LED board current temperature
UID	Shows the unique ID for the RDM protocoll. <0x02E20002xxxx>

## FACTORY RESET

Resets the fixture to its factory default settings.

# DMX PROTOCOLS

HSV	Function	Value	Setting	Remark
1	Hue	000 - 255	0 - 100%	
2	Saturation	000 - 255	0 - 100%	
3	Value	000 - 255	0 - 100%	

**Note:** In HSV mode, Hue stands for the visible light, such as red, yellow, and cyan, etc. Saturation refers to the dominance of hue in the color; when saturation is at 100%, then the color is at its purest. Value is the color's brightness; when value is at 100%, then the color is at its brightest.

HSI	Function	Value	Setting	Remark
1	Hue	000 - 255	0 - 100%	
2	Saturation	000 - 255	0 - 100%	
3	Intensity	000 - 255	0 - 100%	

4 CH	Function	Value	Setting	Remark
1	Red	000 - 255	0 - 100%	
2	Green	000 - 255	0 - 100%	
3	Blue	000 - 255	0 - 100%	
4	White	000 - 255	0 - 100%	

6 CH	Function	Value	Setting	Remark
1	Dimmer	000 - 255	0 - 100%	
2	Red	000 - 255	0 - 100%	
3	Green	000 - 255	0 - 100%	
4	Blue	000 - 255	0 - 100%	
5	White	000 - 255	0 - 100%	
6	Shutter	000 - 024	Shutter open	
		025 - 064	Strobe 1 (fast → slow)	
		065 - 069	Shutter open	
		070 - 084	Strobe 2: opening pulse (fast → slow)	
		085 - 089	Shutter open	
		090 - 104	Strobe 3: closing pulse (fast → slow)	
		105 - 109	Shutter open	
		110 - 124	Strobe 4: random strobe (fast → slow)	
		125 - 129	Shutter open	
		130 - 144	Strobe 5: random opening pulse (fast → slow)	
		145 - 149	Shutter open	
		150 - 164	Strobe 6: random closing pulse (fast → slow)	
		165 - 169	Shutter open	
		170 - 184	Strobe 7: burst pulse (fast → slow)	
		185 - 189	Shutter open	
		190 - 204	Strobe 8: random burst pulse (fast → slow)	
205 - 209	Shutter open			
210 - 224	Strobe 9: sine wave (fast → slow)			
225 - 229	Shutter open			
230 - 244	Strobe 10: burst (fast → slow)			
245 - 255	Shutter open			

# DMX PROTOCOLS

7 CH	Function	Value	Setting	Remark
1	Dimmer	000 - 255	0 - 100%	
2	Red	000 - 255	0 - 100%	
3	Green	000 - 255	0 - 100%	
4	Blue	000 - 255	0 - 100%	
5	White	000 - 255	0 - 100%	
6	Shutter	000 - 024	Shutter open	
		025 - 064	Strobe 1 (fast → slow)	
		065 - 069	Shutter open	
		070 - 084	Strobe 2: opening pulse (fast → slow)	
		085 - 089	Shutter open	
		090 - 104	Strobe 3: closing pulse (fast → slow)	
		105 - 109	Shutter open	
		110 - 124	Strobe 4: random strobe (fast → slow)	
		125 - 129	Shutter open	
		130 - 144	Strobe 5: random opening pulse (fast → slow)	
		145 - 149	Shutter open	
		150 - 164	Strobe 6: random closing pulse (fast → slow)	
		165 - 169	Shutter open	
		170 - 184	Strobe 7: burst pulse (fast → slow)	
185 - 189	Shutter open			
190 - 204	Strobe 8: random burst pulse (fast → slow)			
205 - 209	Shutter open			
210 - 224	Strobe 9: sine wave (fast → slow)			
225 - 229	Shutter open			
230 - 244	Strobe 10: burst (fast → slow)			
245 - 255	Shutter open			
7	CCT	000 - 009	No function	
		010 - 255	8000K - 2000K	

11 CH	Function	Value	Setting	Remark
1	Dimmer	000 - 255	0 - 100%	
2	Red	000 - 255	0 - 100%	
3	Green	000 - 255	0 - 100%	
4	Blue	000 - 255	0 - 100%	
5	White	000 - 255	0 - 100%	
6	Shutter	000 - 024	Shutter open	
		025 - 064	Strobe 1 (fast → slow)	
		065 - 069	Shutter open	
		070 - 084	Strobe 2: opening pulse (fast → slow)	
		085 - 089	Shutter open	
		090 - 104	Strobe 3: closing pulse (fast → slow)	
		105 - 109	Shutter open	
		110 - 124	Strobe 4: random strobe (fast → slow)	
		125 - 129	Shutter open	
		130 - 144	Strobe 5: random opening pulse (fast → slow)	
		145 - 149	Shutter open	
		150 - 164	Strobe 6: random closing pulse (fast → slow)	
		165 - 169	Shutter open	
		170 - 184	Strobe 7: burst pulse (fast → slow)	
		185 - 189	Shutter open	
190 - 204	Strobe 8: random burst pulse (fast → slow)			
205 - 209	Shutter open			
210 - 224	Strobe 9: sine wave (fast → slow)			
225 - 229	Shutter open			
230 - 244	Strobe 10: burst (fast → slow)			
245 - 255	Shutter open			
7	CCT	000 - 009	No function	
		010 - 255	8000K - 2000K	
8	Color wheel	000 - 004	No Function	
		005 - 255	Color wheel rotation effect	
9	Auto program	000 - 009	No function	
		010 - 019	Auto program 1	
		020 - 029	Auto program 2	
		.....	.....	
		100 - 109	Auto program 10 (AUTO 1-10 cycle)	
		110 - 119	Custom program 1	
		120 - 129	Custom program 2	
		.... 200 - 255	..... Custom program 10	
10	Speed	000	No function	
		1 - 255	AUTO Speed or Dimmer Speed	
11	Fixture control settings	000 - 094	No function	<sup>1</sup> , value must be held for 3 seconds to activate.
		095 - 099	Manual calibration output mode <sup>1</sup>	
		100 - 104	Raw color output mode <sup>1</sup>	
		105 - 109	No function	
		110 - 114	Normal dimming, speed of changes unrestricted <sup>1</sup>	
		115 - 119	No function	
		120 - 124	Smooth dimming, speed of changes restricted slightly <sup>1</sup>	
		125 - 129	No function	
		130 - 134	600 Hz Refresh rate <sup>1</sup>	
		135 - 139	1200Hz Refresh rate <sup>1</sup>	
		140 - 144	2400Hz Refresh rate <sup>1</sup>	
		145 - 149	4800Hz Refresh rate <sup>1</sup>	
		150 - 249	No Function	
250 - 255	illuminate display			

# ONBOARD CONTROL MENUS

NO.	Main Menu	Menu level 2	Menu level 3	Remark	
1	DMX ADDRESS	<001>		Default 001	
2	CONTROL MODE	4CH	1. Red, 2.Green, 3.Blue, 4.White		
		6CH	1. Dimmer, 2.Red, 3.Green, 4.Blue, 5.White, 6.Strobe		
		7CH	1. Dimmer, 2.Red, 3.Green, 4.Blue, 5.White, 6.Strobe, 7.CCT		
		11CH	1. Dimmer, 2.Red, 3.Green, 4.Blue, 5.White, 6.Strobe, 7.CCT, 8.Macro color, 9.Effect, 10.Speed, 11.Function set	Default : 11CH	
		HSV	1. Hue 2. Saturation 3. Value		
		HSI	1. Hue 2. Saturation 3. Intensity		
3	PERSONALITY	Dimmer Speed	Normal Smooth	Default : Normal	
		Key-Lock	ON/OFF No Calibration	Default : OFF	
		Calibration	Manual	Red (0-255) Green (0-255) Blue (0-255)	Default : NO CALIBRATION
		Refresh rate	600/1200/2400/4800		Default : 600
		LCD brightness	Level(1 - 10)		
4	STATIC COLOR	Fixed color	R RG RW RBW G RB GW GBW B GB BW RGBW W RGB RGW	Default : RGBW	
		White presets	2000K/3000K/4000K/5000K/6000K/7000K/8000	Default : 6000K	
		Manual color	Red (0-255) Green (0-255) Blue (0-255) White (0-255)	Default : Red:255, Green:255 Blue:255, White:255	
5	AUTO	AUTO (1 - 10) Program (1-10)	Speed 0 - 20	Default : AUTO 1	
6	EDITOR	Program (01 - 10)	Scene (01 - 30)	Red (0-255) Green (0-255) Blue (0-255) White (0-255) Strobe (0-20) Time (0-255) Fade (0-255)	Program 10 has 90 Scenes
7	INFO	Software type Usage time Temperature UID	VX.XX TOTAL Xxxx hours RESET XXX°C 0x02E2000xxxxx	Use time reset (password)	
8	FACTORY RESET	LOAD			

# SPECIFICATIONS

<b>Physical</b>	
Length	259mm
Width	179mm
Height	290mm
Weight	3.8 kg without accessories
<b>Dynamic Effects</b>	
beam angle	15°
<b>Optics</b>	
Light source	14 pcs high-power LED(RGBW)
<b>Control and Programming</b>	
Control	DMX
DMX channels	4 / 6 / 7 / 11 / HSV / HSI
Setting and addressing	Control panel with backlit LCD graphic display
Protocol	RDM, USITT DMX512-A
<b>Control and Programming</b>	
Color	Black
Housing	High strength die-casting aluminum
Protection rating	IP 65 (if rubber covers are placed correctly when connectors are not used)
<b>Installation</b>	
Orientation	Any
Minimum distance to combustible materials	100 mm. from fixture
Minimum distance to illuminated surfaces	200 mm. from fixture
<b>Connections</b>	
AC power input	PowerCON TRUE <sup>®</sup> input socket
AC power throughput	PowerCON TRUE <sup>®</sup> output socket
DMX data in/out	5 pin locking XLR (3 pin optional)
<b>Electrical</b>	
AC power	100-240 V nominal, 50/60 Hz
Maximum total power consumption	105 W
Power supply unit	Auto-ranging electronic switch mode
Power consumption, all effects static, zero light output	<15 W
<b>Power consumption</b>	
120 V, 60 Hz	104 W, PF * 0.994
240 V, 50 Hz	102 W, PF * 0.943
* PF = power factor. Measurements made at nominal voltage with all LEDs at full intensity. Allow for a deviation of +/- 10%.	
<b>Cooling</b>	
Maximum ambient temperature (Ta max.)	40° C
Minimum ambient temperature (Ta min.)	5° C
Total heat dissipation (calculated, +/- 10%)	820 BTU/hr.

# Limited Warranty

Nuri\*Lites LED fixtures (the Product) are warranted by TMB against defective materials or workmanship for a period of one (1) year from the date of original sale by TMB.

TMB's warranty shall be restricted to the repair or replacement of any part that proves to be defective and for which a claim is submitted to TMB before the expiration of the applicable warranty periods.

This Limited Warranty is void if the defects of the Product are the result of:

- Opening the casing, repair, or adjustment by anyone other than TMB or persons specifically authorized by TMB
- Accident, physical abuse, mishandling, or misapplication of the product.
- Damage due to lightning, earthquake, flood, terrorism, war, or act of God.

TMB will not assume responsibility for any labor expended, or materials used, to replace and/or repair the Product without TMB's prior written authorization. Any repair of the Product in the field, and any associated labor charges, must be authorized in advance by TMB. Freight costs on warranty repairs are split 50/50: Customer pays to ship defective product to TMB; TMB pays to ship repaired product, ground freight, back to Customer.

This warranty DOES NOT cover consequential damages or costs of any kind.

A Return Merchandise Authorization (RMA) Number must be obtained from TMB prior to return of any defective merchandise for warranty or non-warranty repair. For all repairs please contact TMB Tech Support Repair using the contact information below or email [TechSupportRepairNA@tmb.com](mailto:TechSupportRepairNA@tmb.com).

US  
527 Park Ave., San Fernando, CA 91340  
Tel: +1 818.899.8818  
Fax: +1 818.899.8813  
[tmb-info@tmb.com](mailto:tmb-info@tmb.com)  
[www.tmb.com](http://www.tmb.com)

UK  
21 Armstrong Way, Southall, UB2 4SD England  
Tel. +44 (0)20.8574.9700  
Fax +44 (0)20.8574.9701  
[tmb-info@tmb.com](mailto:tmb-info@tmb.com)  
[www.tmb.com](http://www.tmb.com)

# Return Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Merchandise Authorization Number (RMA #). Products returned without an RMA # will be refused. Please contact TMB and request RMA # prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. TMB reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Note: If you are given an RMA #, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) The RMA #
- 5) A brief description of the symptoms

# TMB 24/7 Technical Support

US/Canada: +1 818.794.1286  
Toll Free: 1 877.862.3833 (877.TMB.DUDE)  
UK: +44 (0)20.8574.9739  
Toll Free: 0800.652.5418  
e-mail: [techsupport@tmb.com](mailto:techsupport@tmb.com)